



SBC-260

User Manual

Version 1.0

Published August 25, 2023

Copyright©2023 ASRockInd INC. All rights reserved.

Version 1.0

Published August, 2023

Copyright©2023 ASRockInd INC. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRockInd Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRockInd. ASRockInd assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRockInd does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRockInd, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRockInd has been advised of the possibility of such damages arising from any defect or error in the documentation or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

“Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate”

ASRockInd Website: <http://www.asrockind.com>

The terms HDMI® and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



CAUTION:

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

Contents

Chapter 1 Introduction	1
1.1 Package Contents	1
1.2 Specifications	2
1.3 Motherboard Layout	4
1.4 I/O Panel	7
1.5 Block Diagram	8
Chapter 2 Installation	9
2.1 Screw Holes	9
2.2 Pre-installation Precautions	9
2.3 Installation of Memory Modules (SO-DIMM)	10
2.4 Expansion Slots	11
2.5 Jumpers Setup	12
2.6 Onboard Headers and Connectors	15
Chapter 3 UEFI SETUP UTILITY	21
3.1 Introduction	21
3.1.1 Entering BIOS Setup	21
3.1.2 UEFI Menu Bar	22
3.1.3 Navigation Keys	23
3.2 Main Screen	24
3.3 Advanced Screen	25
3.3.1 CPU Configuration	26
3.3.2 Chipset Configuration	29
3.3.3 Storage Configuration	31

3.3.4	Super IO Configuration	33
3.3.5	ACPI Configuration	34
3.3.6	USB Configuration	35
3.3.7	Trusted Computing	36
3.4	Hardware Health Event Monitoring Screen	38
3.5	Security Screen	39
3.6	Boot Screen	44
3.7	Exit Screen	45

Chapter 1 Introduction

Thank you for purchasing ASRockInd **SBC-260** motherboard, a reliable motherboard produced under ASRockInd's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRockInd's commitment to quality and endurance.

In this manual, chapter 1 and 2 contain introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 contains the configuration guide to BIOS setup.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRockInd website without further notice. You may find the latest CPU support lists on ASRockInd website as well.

ASRockInd website <https://www.asrockind.com/>

If you require technical support related to this motherboard, please visit our website for specific information about the model you are using.

<https://www.asrockind.com/support/index.asp>

1.1 Package Contents

ASRockInd **SBC-260** Motherboard (3.5" SBC (5.8-in x 4-in x 1.02-in, 14.7 cm x 10.2 cm x 2.60 cm))

ASRockInd **SBC-260** Jumper Setting Instruction

Gift Package:

- 1 x Heat Spreader 147*102.2mm
- 3 x SCREW M2*2, D=5
- 2 x COM Cable
- 1 x SATA Data Cable
- 1 x SATA Power Cable
- 1 x DC-in Cable

Bulk Package:

- 3 x SCREW M2*2, D=5


1.2 Specifications

Form Factor	Dimensions	3.5”SBC (5.8-in x 4-in x 1.02-in, 14.7 cm x 10.2 cm x 2.60 cm)
Processor System	CPU	Intel® Alder Lake-N SoC Processors SBC-260J (N97, QC, max speed up to 3.6GHz, 12W) *For other CPU SKUs request, please contact regional Sales for availability.
	Chipset	SoC
	BIOS	AMI SPI 256 Mbit
Memory	Technology	Single Channel DDR4 3200 MHz
	Capacity	16GB
	Socket	1 x 260-pin SO-DIMM
Graphics	Controller	Intel® UHD Graphics
	HDMI	HDMI 2.0b Max resolution up to 4096x2160@60Hz
	DisplayPort	DP 1.4a Max resolution up to 4096x2160@60Hz
	VGA	Max resolution up to 1920x1200
	LVDS	Dual channel 24 bit up to 1920x1200@60Hz (connector shared with eDP)
	eDP	Max resolution up to 1920x1080@60Hz (connector shared with LVDS)
Expansion Slot	M.2	1 x M.2 (Key E, 2230) with PCIe Gen3 x1, USB 2.0 and CNVi for Wireless 1 x M.2 (Key B, 3042/3052) with PCIe Gen3 x1/USB 3.2/USB 2.0 and SIM for 4G/5G
	SIM Socket	1 x SIM socket connected to M.2 key B
Audio	Interface	Realtek ALC256 HD, High Definition Audio
Ethernet	Controller/ Speed	LAN1: Intel® I226V with 10/100/1000/2500 Mbps LAN2: Intel® I210AT with 10/100/1000 Mbps
	Controller	2 x RJ-45
Rear I/O	HDMI	1 x HDMI 2.0b
	DisplayPort	1 x DP 1.4a
	VGA	1
	Ethernet	1 x 1 Gigabit LAN, 1 x 2.5 Gigabit LAN
	USB	2 x USB 3.2 Gen2


Internal Connector	USB	4 x USB 2.0 (2 x 2.54 pitch header)
	COM	COM1, COM2 (RS-232/422/485) COM3, COM4 (RS-232)
	GPIO	4 x GPI, 4 x GPO
	LVDS	1 (connector with LVDS/eDP signal, switch by BIOS)
	SATA PWR Output	1
	Speaker Header	1
	MIPI Camera Header	1 (optional)
Storage	M.2	1 x M.2 (Key M, 2242/2260/2280) with PCIe Gen3 x1 or SATA3 for SSD
	SATA	1 x SATA3
Security	TPM	TPM 2.0 onboard IC
Watchdog Timer	Output	From Super I/O to drag RESETCON#
	Interval	256 Segments, 0, 1, 2, ...255 Sec
Power Requirements	Input PWR	9~36V DC-In with 4-pin wafer PWR
	Power On	AT/ATX Supported -AT: Directly PWR on as power input ready -ATX: Press button to PWR on after power input ready
Environment	Operating Temp	-20°C - 70°C
	Storage Temp	-40°C - 85°C
	Operating Humidity	5% - 90%
	Storage Humidity	5% - 90%

1.3 Motherboard Layout

Top:

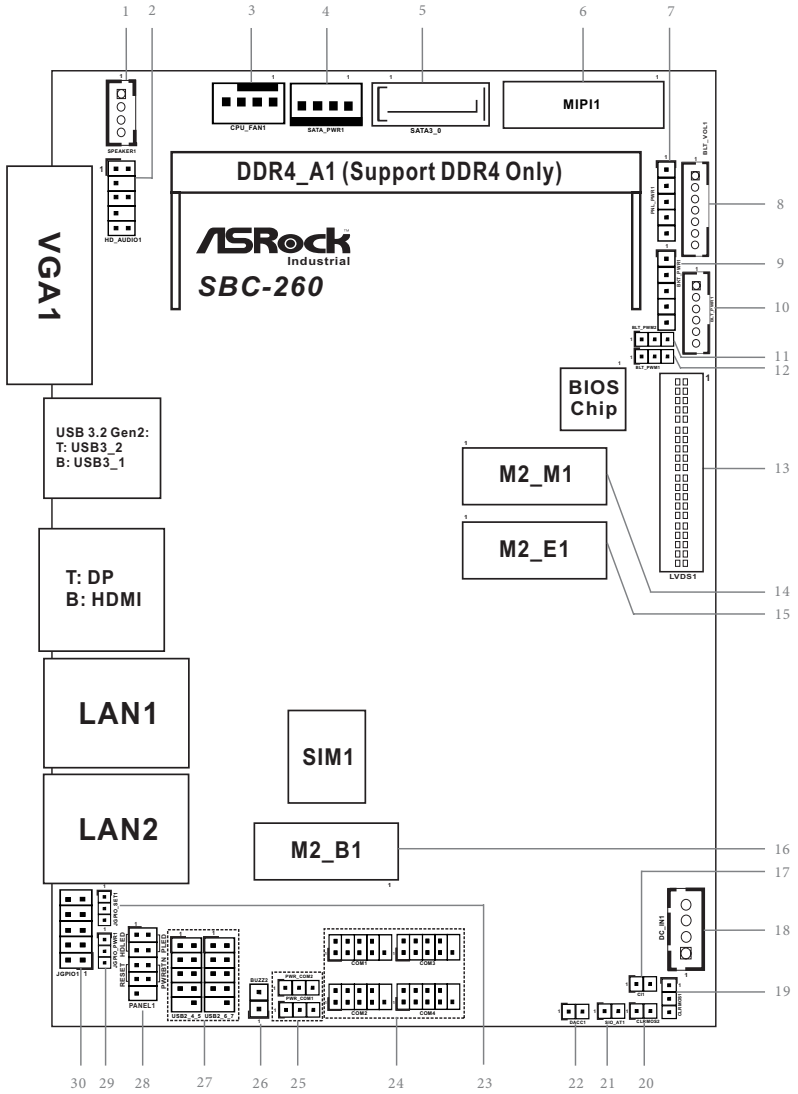

Bottom:




- 1 : 3W Audio AMP Output Wafer (SPEAKER1)
- 2 : Front Panel Audio Header (HD_AUDIO1)
- 3 : CPU FAN Connector (+12V) (CPU_FAN1)
- 4 : SATA Power Output Connector (SATA_PWR1)
- 5 : SATA3 Connector (SATA3_0)
- 6 : MIPI Connector (MIPI1)
- 7 : Panel Power Select (LCD_VCC) (PNL_PWR1)
- 8 : Backlight Volume Control (BLT_VOL1)
- 9 : Backlight Power Select (LCD_BLT_VCC) (BKT_PWR1)
- 10 : Inverter Power Control Wafer (BLT_PWR1)
- 11 : CON_LBKLCTL Voltage Level (BLT_PWM2)
- 12 : Brightness Control Mode (BLT_PWM1)
- 13 : LVDS Panel Connector (LVDS1)
- 14 : M.2 Key-M Socket (M2_M1)
- 15 : M.2 Key-E Socket (M2_E1)
- 16 : M.2 Key-B Socket (M2_B1)
- 17 : Chassis Intrusion Header (CI1)
- 18 : 4-pin DC-in PWR Connector (Input +9V~+36V) (DC_IN1)
- 19 : Clear CMOS Header (CLRMOS1)
- 20 : Auto Clear CMOS Header (CLRMOS2)
- 21 : ATX/AT Mode Jumper (SIO_AT1)
- 22 : DACC1
- 23 : GPIO Default Setting (JGPIO_SET1)
- 24 : Internal COM Port Headers
 - COM1, COM2 (RS232/422/485)
 - COM3, COM4 (RS232)
- 25 : COM Port Pin9 PWR Setting Jumpers
 - PWR_COM1 (For COM Port1)
 - PWR_COM2 (For COM Port2)
- 26 : Buzzer Header (BUZZ2)
- 27 : USB 2.0 Connectors (USB2_4_5, USB2_6_7)
- 28 : System Panel Header (PANEL1)
- 29 : Digital Input/Output Power Select (JGPIO_PWR) (JGPIO_PWR1)
- 30 : Digital Input/Output Pin Header (JGPIO1)

Back Side:

- 31 : Buzzer (BUZZ1)
- 32 : ESPI Connector (ESPI1)


1.4 I/O Panel

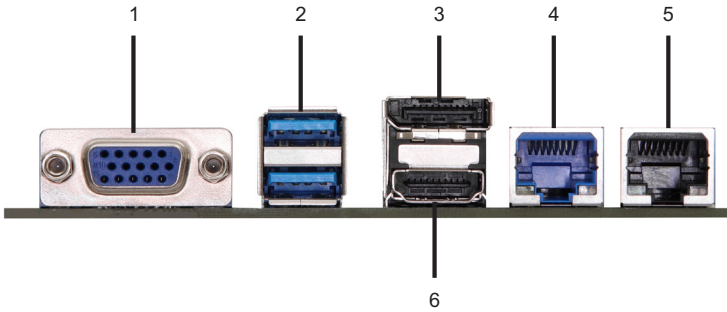

- | | | | |
|---|-------------------------------|---|------------------------|
| 1 | VGA Port (VGA1) | 4 | RJ45 LAN Port (LAN1)* |
| 2 | USB 3.2 Gen2 Ports (USB3_1_2) | 5 | RJ45 LAN Port (LAN2)** |
| 3 | DisplayPort (DP) | 6 | HDMI Port (HDMI) |

* There are two LEDs next to the LAN1 port. Please refer to the table below for the LAN1 port LED indications.


LAN1 Port LED Indications

Activity/Link LED		SPEED LED		ACT/LINK LED	SPEED LED
Status	Description	Status	Description	LED	LED
Off	No Link	Off	10Mbps/100Mbps connection		
Blinking	Data Activity	Orange	1Gbps connection		
On	Link	Green	2.5Gbps connection		

LAN1 Port

** There are two LEDs next to the LAN2 port. Please refer to the table below for the LAN2 port LED indications.


LAN2 Port LED Indications

Activity/Link LED		SPEED LED		ACT/LINK LED	SPEED LED
Status	Description	Status	Description	LED	LED
Off	No Link	Off	10Mbps connection		
Blinking	Data Activity	Orange	100Mbps connection		
On	Link	Green	1Gbps connection		

LAN2 Port

1.5 Block Diagram

SBC-260

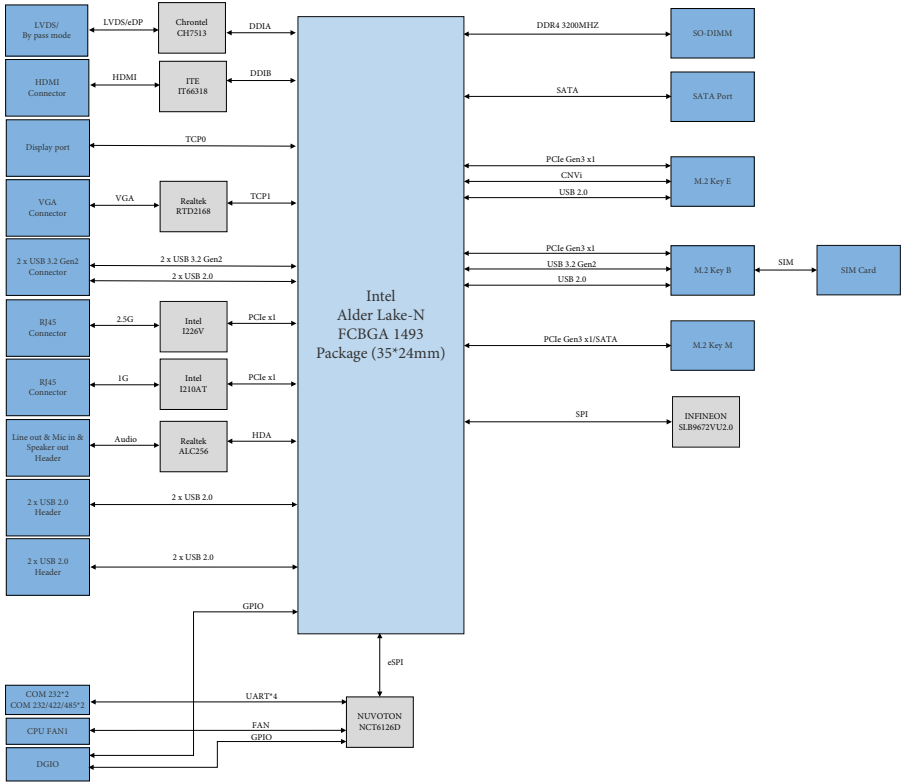

Chapter 2 Installation

This is a 3.5" SBC (5.8-in x 4-in x 1.02-in, 14.7 cm x 10.2 cm x 2.60 cm) form factor motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

2.1 Screw Holes

Place screws into the holes to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component.
5. Heatsink (The thermal solution of whole system needs to be designed additionally.)




Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.3 Installation of Memory Modules (SO-DIMM)

SBC-260 provides one 260-pin DDR4 (Double Data Rate 4) SO-DIMM slots, and supports Single Channel Memory Technology.

- Step 1. Align a SO-DIMM on the slot such that the notch on the SO-DIMM matches the break on the slot.

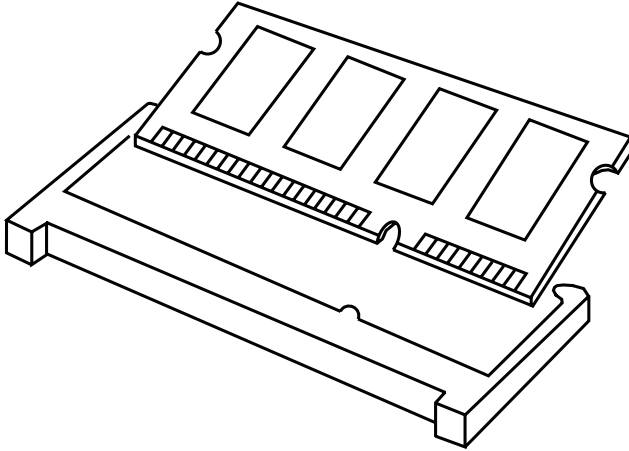

The SO-DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the SO-DIMM if you force the SO-DIMM into the slot at incorrect orientation.

- Step 2. Firmly insert the SO-DIMM into the slot until the retaining clips at both ends fully snap back in place and the SO-DIMM is properly seated.

2.4 Expansion Slots

There are 3 M.2 sockets and 1 SIM socket on this motherboard.

SIM socket: 1 x SIM socket connected to M.2 key B

M.2 sockets: 1 x M.2 (Key E, 2230) with PCIe Gen3 x1, USB 2.0 and CNVi for Wireless
 1 x M.2 (Key B, 3042/3052) with PCIe Gen3 x1/USB 3.2/USB 2.0 and SIM for 4G/5G
 1 x M.2 (Key M, 2242/2260/2280) with PCIe Gen3 x1 or SATA3 for SSD

M.2 Key-E Socket
(M2_E1)

Pin	Signal Name	Signal Name	Pin
1	GND	+3.3V	2
3	USB_D+	+3.3V	4
5	USB_D-	NA	6
7	GND	NA	8
9	CNV_WGR_D1-	CNV_RF_RESET	10
11	CNV_WGR_D1+	NA	12
13	GND	MODEM_CLKREQ	14
15	CNV_WGR_D0-	NA	16
17	CNV_WGR_D0+	GND	18
19	GND	NA	20
21	CNV_WGR_CLK	CNV_BRI_RSP	22
23	CNV_WGR_CLK+		
		CNV_BGL_DT	32
33	GND	CNV_RGL_RSP	34
35	PETp	CNV_BRI_DT	36
37	PETrn	NA	38
39	GND	NA	40
41	PERp	NA	42
43	PERn	NA	44
45	GND	NA	46
47	PEFCLKp	NA	48
49	PEFCLKn	SUSCLK	50
51	GND	PERST0#	52
53	CLKREQ#	W_DISABLE1#	54
55	NA	W_DISABLE2#	56
57	GND	SMB_DATA	58
59	CNV_WT_D1-	SMB_CLK	60
61	CNV_WT_D1+	NA	62
63	GND	NA	64
65	CNV_WT_D0-	NA	66
67	CNV_WT_D0+	NA	68
69	GND	NA	70
71	CNV_WT_CLK	+3.3V	72
73	CNV_WT_CLK+	+3.3V	74
75	GND		

M.2 Key-B Socket
(M2_B1)


Pin	Signal Name	Signal Name	Pin
1	NA	+3.3V	2
3	GND	+3.3V	4
5	GND	FuLL_Card_Power_off	6
7	USB_D+	W_DISABLE1#	8
9	USB_D-	WWAN_LED#	10
11	GND		
		NA	20
21	GND	NA	22
23	NA	NA	24
25	NA	W_DISABLE2#	26
27	GND	NA	28
29	USB3_RX-	UIM_RESET	30
31	USB3_RX+	UIM_CLK	32
33	GND	UIM_DATA	34
35	USB3_TX-	UIM_PWR	36
37	USB3_TX+	NA	38
39	GND	NA	40
41	PERn0	NA	42
43	PERP0	NA	44
45	GND	NA	46
47	PETn0	NA	48
49	PETP0	PERST#	50
51	GND	CLKREQ#	52
53	PEFCLKn	NA	54
55	PEFCLKp	NA	56
57	GND	NA	58
59	NA	NA	60
61	NA	NA	62
63	NA	NA	64
65	NA	NA	66
67	NA	NA	68
69	PEDET	+3.3V	70
71	GND	+3.3V	72
73	GND	+3.3V	74
75	NA		

M.2 Key-M Socket
(M2_M1)

Pin	Signal Name	Signal Name	Pin
1	GND	+3.3V	2
3	GND	+3.3V	4
5	NA	NA	6
7	NA	NA	8
9	GND	SATA_LED	10
11	NA	+3.3V	12
13	NA	+3.3V	14
15	GND	+3.3V	16
17	NA	+3.3V	18
19	NA	NA	20
21	GND	NA	22
23	NA	NA	24
25	NA	NA	26
27	GND	NA	28
29	NA	NA	30
31	NA	NA	32
33	GND	NA	34
35	NA	NA	36
37	NA	NA	38
39	GND	NA	40
41	PERn0/SATA-B+	NA	42
43	PERp0/SATA-B-	NA	44
45	GND	NA	46
47	PETn0/SATA-A-	NA	48
49	PETp0/SATA-A+	PERST#	50
51	GND	CLKREQ#	52
53	PEFCLKn	NA	54
55	PEFCLKp	NA	56
57	GND	NA	58
67	NA	NA	68
69	PEDET	+3.3V	70
71	GND	+3.3V	72
73	GND	+3.3V	74
75	GND		

2.5 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is “Short.” If no jumper cap is placed on pins, the jumper is “Open.” The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when jumper cap is placed on these 2 pins.

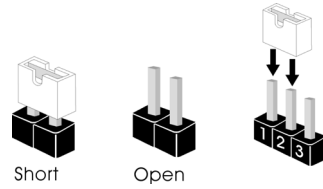

Panel Power Select (LCD_VCC)
(5-pin PNL_PWR1)
(see p. 4 No. 7)



Setting	Description
1-2	+3V (Default)
2-3	+5V
3-4	+5V
4-5	+12V

Use this to set up the VDD power of the LVDS connector.

Backlight Power Select
(LCD_BLT_VCC)
(5-pin BKT_PWR1)
(see p. 4 No. 9)



Setting	Description
1-2	LCD_BLT_VCC : +5V (Default)
2-3	LCD_BLT_VCC : +12V
4-5	LCD_BLT_VCC : DC_IN

Use this header to set up the backlight power of the LVDS connector and the panel backlight power of BLT_PWM1.

CON_LBKLT_CTL Voltage Level
(3-pin BLT_PWM2)
(see p. 4 No. 11)



Setting	Description
1-2	3V Level (Default)
2-3	5V Level

Brightness Control Mode
(3-pin BLT_PWM1)
(see p. 4 No. 12)



Setting	Description
1-2	From eDP PWM to CON_LBKLT_CTL
2-3	From LVDS PWM to CON_LBKLT_CTL (Default)

Please set to 1-2 when adjusting brightness by Brightness Control bar under OS.

Please set to 2-3 when adjusting brightness by BLT_VOL1.

Chassis Intrusion Header

(2-pin C11)

(see p. 4 No. 17)



Setting	Description
Open	Normal (Default)
Short	Active Case Open

This motherboard supports CASE OPEN detection feature that detects if the chassis cover has been removed. This feature requires a chassis with chassis intrusion detection design.

Clear CMOS Header

(3-pin CLRMOS1)

(see p. 4, No. 19)



Setting	Description
1-2	Normal (Default)
2-3	Clear CMOS

NOTE: CLRMOS1 allows you to clear the data in CMOS. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short pin2 and pin3 on CLRMOS1 for 5 seconds. However, please do not clear the CMOS right after you update the BIOS. If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action. Please be noted that the password, date, and time will be cleared only if the CMOS battery is removed.

Auto Clear CMOS Header

(2-pin CLRMOS2)

(see p. 4, No. 20)



Setting	Description
1-2	Normal (Default)
2-3	Auto Clear CMOS when AC Power On

NOTE: CLRMOS2 allows you to clear the data in CMOS automatically when AC power on. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord, then use a jumper cap to short the pins on CLRMOS2.

ATX/AT Mode Jumper

(2-pin SIO_AT1)

(see p. 4 No. 21)



Setting	Description
Open	ATX Mode (Default)
Short	AT Mode

DACC1
(2-pin DACC1)
(see p. 4 No. 22)



Setting	Description
Open	No ACC
Short	ACC (Default)

Auto clear CMOS when system boot improperly.

GPIO Default Setting
(3-pin JGPIO_SET1)
(see p. 4 No. 23)



Setting	Description
1-2	Pull-High (Default)
2-3	Pull-Low

The header is used for GPIO default value setting for either pull high or pull low. Pulling the header to a high/low value means the voltage is anchored to VCC/GND, in a stable, non-floating state.

COM Port Pin9 PWR Setting Jumpers
(3-pin PWR_COM1 (For COM Port1),
PWR_COM2 (For COM Port2))
(see p. 4 No. 25)



Setting	Description
1-2	+5V (Default)
2-3	+12V

The maximum current for per port is 1A, and the power supply is either 5V or 12V. Use the jumpers to set the power for COM port pin 9.

Digital Input/Output Power Select
(3-pin JGPIO_PWR1)
(see p. 4 No. 29)



Setting	Description
1-2	+12V
2-3	+5V (Default)

The maximum current JGPIO_PWR1 provides is 1A.

2.6 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard!

2W Audio AMP Output Wafer

(4-pin SPEAKER1)

(see p. 4, No. 1)




Pin	Signal Name
1	SPK L-
2	SPK L+
3	SPK R+
4	SPK R-

Front Panel Audio Header

(8-pin HD_AUDIO1)

(see p. 4 No. 2)




Pin	Signal Name	Signal Name	Pin
1	MIC1_L	GND	2
3	MIC1_R		4
5	OUT2_R	MIC1_RET	6
7	J_SENSE		8
9	OUT2_L	OUT_RET	10

This is line out/microphone interface for front panel audio cable that allows jack detection, convenient connection and control of audio devices.

CPU_Fan Connector (+12V)

(4-pin CPU_FAN1)

(see p. 5, No. 3)



Pin	Signal Name
1	GND
2	+12V
3	CPU_FAN_SPEED
4	FAN_SPEED_CONTROL



The board offers three 4-pin CPU fan (Smart Fan) connectors which are compatible with 3-pin CPU fan. If you connect a 3-pin CPU fan to the CPU fan connector on this motherboard, please connect it to pin 1-3. The maximum current is 1A.

SATA Power Output Connector

(4-pin SATA_PWR1)

(see p. 4 No. 4)



Pin	Signal Name
1	+5V
2	GND
3	GND
4	+12V

Please connect a SATA power cable to this connector.

SATA3 Connector

(7-pin SATA3_0)

(see p. 4, No. 5)



Pin	Signal Name
1	GND
2	SATA-A+
3	SATA-A-
4	GND
5	SATA-B-
6	SATA-B+
7	GND

The Serial ATA3 (SATA3) connector supports SATA data cables for internal storage devices. The current SATA3 interface allows up to 6.0 Gb/s data transfer rate.

MIPI Connector (BOM Option)

(36-pin MIP11)

(see p. 4 No. 6)



Pin	Signal Name
1	GND
2	CSL_B_DN2
3	CSL_B_DP2
4	GND
5	CSL_B_DN1
6	CSL_B_DP1
7	GND
8	CSL_B_CLK_N
9	CSL_B_CLK_P
10	GND
11	CSL_B_DN0
12	CSL_B_DP0
13	CSL_B_DN3
14	CSL_B_DP3
15	GND
16	GND
17	+2.8V
18	GND
19	+2.8V
20	+1.8V
21	+1.2V
22	GND
23	IMBCLKOUT0
24	GND
25	I2C1_SCL
26	I2C1_SDA
27	N/C
28	BUF_PLT_RST_1.8_R_N
29	N/C
30	GND
31	N/C
32	+1.2V
33	GND
34	GPP_S1
35	GPP_S2
36	GPP_S3

Backlight Volume Control

(7-pin BLT_VOL1)

(see p. 4 No. 8)




Pin	Signal Name
1	GPP_E7
2	GPP_E3
3	PWRDN
4	BRIGHTNESS_UP
5	BRIGHTNESS_DW
6	GND
7	GND

Inverter Power Control Wafer

(6-pin BLT_PWR1)

(see p. 4 No. 10)




Pin	Signal Name
1	GND
2	GND
3	BL CTL
4	BL EN
5	LCD_BLT_VCC
6	LCD_BLT_VCC

LVDS Panel Connector

(40-pin LVDS1)

(see p. 4 No. 13)

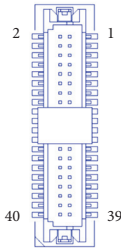

• eDP by pass mode pin definition:

Pin	Signal Name	Signal Name	Pin	Pin	Signal Name	Signal Name	Pin
1	LCD_VCC	LCD_VCC	2	1	LCD_VCC	LCD_VCC	2
3	+3.3V	N/A	4	3	N/A	N/A	4
5	N/A	LVDS_A_DATA0#	6	5	N/A	N/A	6
7	LVDS_A_DATA0	GND	8	7	N/A	GND	8
9	LVDS_A_DATA1#	LVDS_A_DATA1	10	9	EDP_TX1#	EDP_TX1	10
11	GND	LVDS_A_DATA2#	12	11	GND	EDP_TX0#	12
13	LVDS_A_DATA2	GND	14	13	EDP_TX0	GND	14
15	LVDS_A_DATA3#	LVDS_A_DATA3	16	15	N/A	N/A	16
17	GND	LVDS_A_CLK#	18	17	GND	EDP_AUXN	18
19	LVDS_A_CLK	GND	20	19	EDP_AUXP	GND	20
21	LVDS_B_DATA0#	LVDS_B_DATA0	22	21	N/A	N/A	22
23	GND	LVDS_B_DATA1#	24	23	GND	N/A	24
25	LVDS_B_DATA1	GND	26	25	N/A	GND	26
27	LVDS_B_DATA2#	LVDS_B_DATA2	28	27	N/A	N/A	28
29	DPLVDD_EN	LVDS_B_DATA3#	30	29	DPLVDD_EN	N/A	30
31	LVDS_B_DATA3	NC	32	31	N/A	GND	32
33	LVDS_B_CLK#	LVDS_B_CLK	34	33	N/A	N/A	34
35	GND	CON_LBKLT_EN	36	35	GND	CON_LBKLT_EN	36
37	CON_LBKLT_CTL	LCD_BLT_VCC	38	37	CON_LBKLT_CTL	LCD_BLT_VCC	38
39	LCD_BLT_VCC	LCD_BLT_VCC	40	39	LCD_BLT_VCC	LCD_BLT_VCC	40

4-pin DC-in PWR Connector (Input +9V~+36V)

(4-pin DC_IN1)

(see p. 4 No. 18)



Pin	Signal Name
1	GND
2	DC_Input
3	DC_Input
4	GND

Please connect a DC +9V~+36V power supply to this connector.


Internal COM Port Headers

COM1, COM2 (RS232/422/485)

COM3, COM4 (RS232)

(9-pin COM1~4)

(see p. 4 No. 24)



Pin	Signal Name	Signal Name	Pin
1	DDCD#1	RRXD1	2
3	TTXD1	DDTR#1	4
5	GND	DDSR#1	6
7	RRTS#1	CCTS#1	8
9	RRI#1		10



This motherboard supports RS232/422/485 on COM1, 2 ports. Please refer to the table below for the pin definition. In addition, COM1, 2 ports (RS232/422/485) can be adjusted in BIOS setup utility > Advanced Screen > Super IO Configuration. You may refer to our manual for details.

COM1, 2 Ports Pin Definition

Pin	RS232	RS422	RS485
1	DCD	TX-	RTX-
2	RXD	TX+	RTX+
3	TXD	RX+	N/A
4	DTR	RX-	N/A
5	GND	GND	GND
6	DSR	N/A	N/A
7	RTS	N/A	N/A
8	CTS	N/A	N/A
9	N/A	N/A	N/A

Buzzer Header

(2-pin BUZZ2)

(see p. 4 No. 26)




Pin	Signal Name
1	BUZZ+
2	BUZZ-

This header provides additional external Buzzer to boot up debugging.

USB 2.0 Connectors

(9-pin USB2_4_5, USB2_6_7)

(see p. 4 No. 27)




Pin	Signal Name	Signal Name	Pin
1	USB_PWR	USB_PWR	2
3	P-	P-	4
5	P+	P+	6
7	GND	GND	8
9		DUMMY	10

The board provides two USB 2.0 headers and each of them can support two USB 2.0 ports. The maximum current per port is 0.5A.

System Panel Header

(9-pin PANEL1)

(see p. 4 No. 28)



Pin	Signal Name	Signal Name	Pin
1	HDLED+	PLED+	2
3	HDLED-	PLED-	4
5	GND	PWRBTN#	6
7	RESET#	GND	8
9	DUMMY		10

This header accommodates several system front panel functions.



Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments below. Note the positive and negative pins before connecting the cables.

PWRBTN (Power Switch):

Connect to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch.

RESET (Reset Switch):

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):

Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED keeps blinking when the system is in S1 sleep state. The LED is off when the system is in S3/S4 sleep state or powered off (S5).


HDLED (Hard Drive Activity LED):

Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

Digital Input/Output Pin Header

(10-pin JGPIO1)
(see p. 4, No. 30)



Pin	Signal Name	Signal Name	Pin
1	SIO_GP34	GPP_B15	2
3	SIO_GP35	GPP_E1	4
5	SIO_GP36	GPP_E2	6
7	SIO_GP37	GPP_E13	8
9	JGPIO_PWR	GND	10

Back Side:

Buzzer

(BUZZ1)
(see p. 5 No. 31)



ESPI Connector

(20-pin ESP11)
(see p. 5 No. 32)



Pin	Signal Name
1	GND
2	C_ESPI_CLK
3	GND
4	C_ESPI_CS#
5	DEBUG_RESET
6	GND
7	+3V
8	GND
9	SMB_CLK_MAIN
10	SMB_DATA_MAIN
11	C_ESPI_IO0
12	C_ESPI_IO1
13	C_ESPI_IO2
14	C_ESPI_IO3
15	GND
16	+3VSB
17	N/A
18	N/A
19	C_ESPI_ALERT#
20	GND

Chapter 3 UEFI SETUP UTILITY

3.1 Introduction

ASRock Industrial UEFI (Unified Extensible Firmware Interface) is a BIOS utility which offers tweak-friendly options in an advanced viewing interface. The UEFI system works with a USB mouse and offers users a faster, sleeker experience.

This BIOS utility can perform the Power-On Self-Test (POST) during system startup, record hardware parameters of the system, load operating system, and so on. The battery on the motherboard supplies the power needed to the CMOS when the system power is turned off, and the values configured in the UEFI utility are kept in the CMOS.

Please note that inadequate BIOS settings may cause system instability, malfunction or boot failure. We strongly recommend that you do not alter the UEFI default configurations or change the settings only with the assistance of a trained service person.

If the system becomes unstable or fails to boot after you change the setting, try to clear the CMOS values and reset the board to default values. See your motherboard manual for instructions.

3.1.1 Entering BIOS Setup

You may run the UEFI SETUP UTILITY by pressing <F2> or <Delete> right after you power on the computer; otherwise, the Power-On-Self-Test (POST) will continue with its test routines. If you wish to enter the UEFI SETUP UTILITY after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.

This setup guide explains how to use the UEFI SETUP UTILITY to configure all the supported system. The screenshots in this manual are for reference only. UEFI Settings and options may vary owing to different BIOS release versions or CPU installed. Please refer to the actual BIOS version of the motherboard you purchased for detailed screens, settings and options.

3.1.2 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Main	For setting system time/date information
Advanced	For advanced system configurations
H/W Monitor	Displays current hardware status
Security	For security settings
Boot	For configuring boot settings and boot priority
Exit	Exit the current screen or the UEFI Setup Utility



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions for reference purpose only, and may vary from the latest BIOS and do not exactly match what you see on your screen.

3.1.3 Navigation Keys


Use <←> key or <→> key to choose among the selections on the menu bar, and use <↑> key or <↓> key to move the cursor up or down to select items, then press <Enter> to get into the sub screen. You can also use the mouse to click your required item.

Please check the following table for the descriptions of each navigation key.

Navigation Key(s)	Description
+ / -	To change option for the selected items
<Tab>	Switch to next function
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen

3.2 Main Screen


When you enter the UEFI SETUP UTILITY, the Main screen will appear and display the system overview.

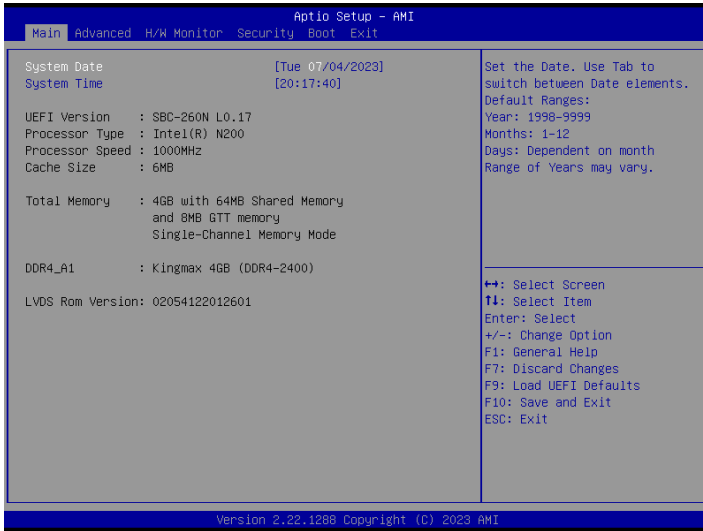

Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen. Options may also vary depending on the features of your motherboard.

3.3 Advanced Screen

In this section, you may set the configurations for the following items: CPU Configuration, Chipset Configuration, Storage Configuration, Super IO Configuration, ACPI Configuration, USB Configuration and Trusted Computing.

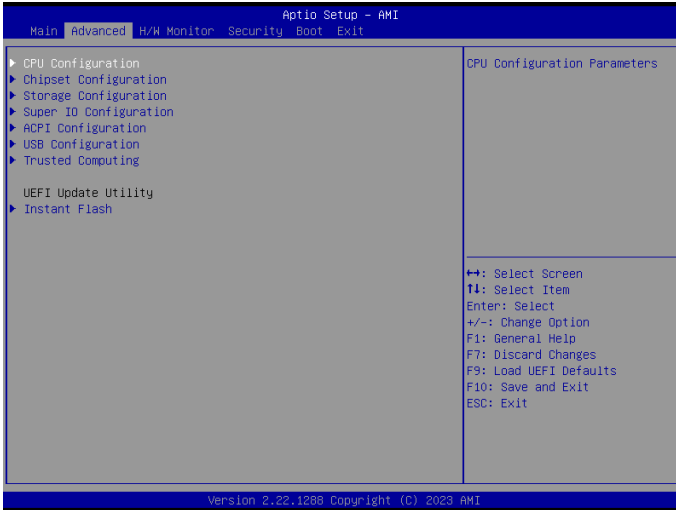


Setting wrong values in this section may cause the system to malfunction.

Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows you to update system UEFI without entering operating systems first like MS-DOS or Windows®. Just launch this tool and save the new UEFI file to your USB flash drive, floppy disk or hard drive, and then you can update your UEFI in only a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. If you execute Instant Flash utility, the utility will show the UEFI files and their respective information. Select the proper UEFI file to update your UEFI, and reboot your system after UEFI update process completes.

3.3.1 CPU Configuration

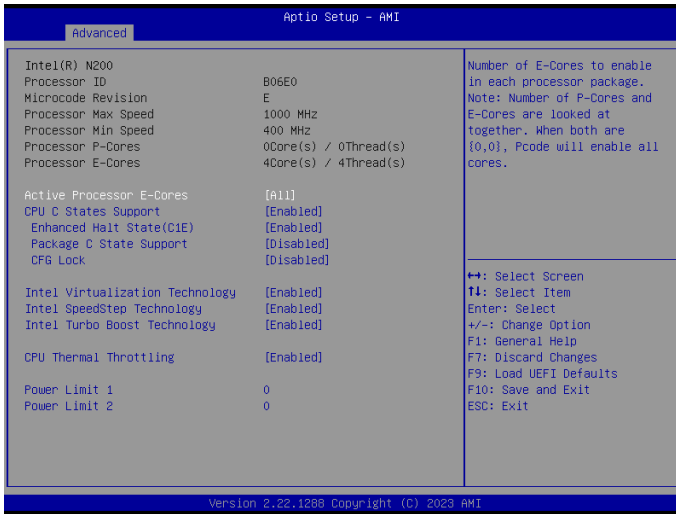

Active Processor E-Cores

Allows you to select the number of E-Cores to enable in each processor package. NOTE: Number of P-Cores and E-Cores are looked at together. When both are {0,0}, Pcode will enable all cores.

CPU C States Support

Allows you to enable CPU C States Support for power saving. It is recommended to keep C3, C6 and C7 all enabled for better power saving.

Configuration options: [Enabled] [Disabled]

Enhanced Halt State (C1E)

The option allows you to enable Enhanced Halt State (C1E) for lower power consumption.

Configuration options: [Enabled] [Disabled]

Package C State Support

The option allows you to enable CPU, PCIe, Memory, Graphics C State Support for power saving.

CFG Lock

The option allows you to enable or disable the CFG Lock.

Configuration options: [Enabled] [Disabled]

Intel Virtualization Technology

Intel Virtualization Technology allows a platform to run multiple operating systems and applications in independent partitions, so that one computer system can function as multiple virtual systems.

Configuration options: [Enabled] [Disabled]

Intel SpeedStep Technology

Intel SpeedStep technology allows processors to switch between multiple frequencies and voltage points for better power saving and heat dissipation. CPU turbo ratio can be fixed when Intel SpeedStep Technology is set to [Disabled] and Intel Turbo Boost Technology is set to [Enabled].

Configuration options: [Enabled] [Disabled].

If you install Windows® 10 and want to enable this function, please set this item to [Enabled]. This item will be hidden if the current CPU does not support Intel SpeedStep technology.



Please note that enabling this function may reduce CPU voltage and lead to system stability or compatibility issues with some power supplies. Please set this item to [Disabled] if above issues occur.

Intel Turbo Boost Technology

Intel Turbo Boost Technology enables the processor to run above its base operating frequency when the operating system requests the highest performance state. The default value is [Enabled].

Configuration options: [Enabled] [Disabled]

CPU Thermal Throttling

CPU Thermal Throttling allows you to enable CPU internal thermal control mechanisms to keep the CPU from overheating.

Configuration options: [Enabled] [Disabled]


Power Limit 1

Power Limit 1 in Milli Watts. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500. Overclocking SKU: Value must be between Max and Min Power Limits (specified by PACKAGE_POWER_SKU_MSR). Other SKUs: This value must be between Min Power Limit and Processor Base Power (TDP) Limit. If value is 0, BIOS will program Processor Base Power (TDP) value.

Power Limit 2

Power Limit 2 value in Milli Watts. BIOS will round to the nearest 1/8W when programming. If the value is 0, BIOS will program this value as $1.25 \times \text{Processor Base Power (TDP)}$. For 12.50W, enter 12500. Processor applies control policies such that the package power does not exceed this limit.

3.3.2 Chipset Configuration

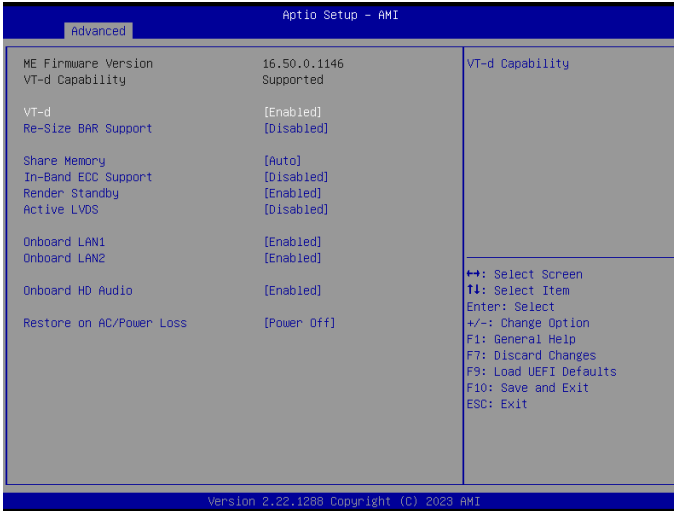

VT-d

Intel® Virtualization Technology for Directed I/O helps your virtual machine monitor better utilize hardware by improving application compatibility and reliability, and providing additional levels of manageability, security, isolation, and I/O performance.

Configuration options: [Enabled] [Disabled]

Re-Size BAR Support

If system has Resizable BAR capable PCIe Devices, this option enables or disables Resizable BAR Support.

Share Memory

Share memory allows you to configure the size of memory that is allocated to the integrated graphics processor when the system boots up.

Configuration options: [Auto] [32M] [64M] [128M] [256M] [512M] [1024M]

Options vary depending on the memory you use on your motherboard.

In-Band ECC Support

This allows you to enable or disable In-Band ECC.

Configuration options: [Enabled] [Disabled]

Render Standby

Power down the render unit when the GPU is idle for lower power consumption.

Active LVDS

Use this to enable or disable the LVDS. The default value is [Disabled]. Set the item to [Enabled]. Then press <F10> to save the setting and restart the system. Now the default value of Active LVDS is changed to [Enabled] (F9 load default is also set to [Enabled]).

Change the setting from [Enabled] to [Disabled], and then press <F10> to save the setting and restart the system. Likewise, the default value of Active LVDS is changed to [Disabled] (F9 load default is also set to [Disabled]).

Onboard LAN1

This allows you to enable or disable the Onboard LAN1 feature.

Onboard LAN2

This allows you to enable or disable the Onboard LAN2 feature.

Onboard HD Audio

Onboard HD Audio allows you to enable or disable the onboard HD audio controller. Set this item to [Auto] to enable the onboard HD and automatically disable it when a sound card is installed.

Configuration options: [Auto] [Enabled] [Disabled]


Restore on AC/Power Loss

Allows you to select the power state after a power failure.

[Power Off] sets the power to remain off when the power recovers.

[Power On] sets the system to start to boot up when the power recovers.

3.3.3 Storage Configuration

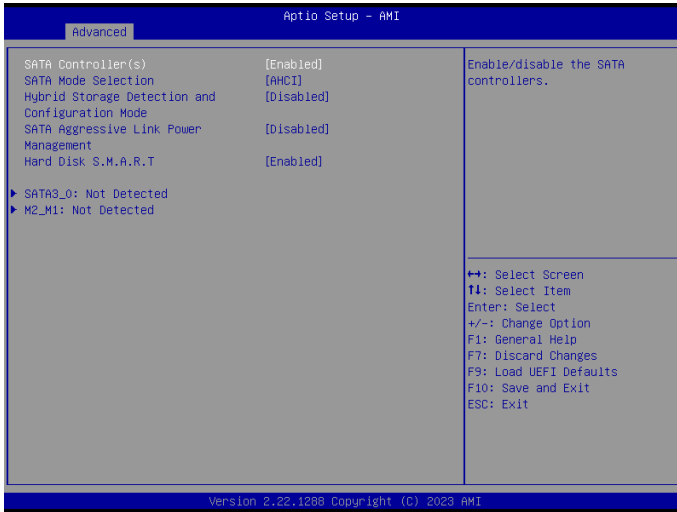

SATA Controller(s)

Allows you to enable or disable the SATA controllers.

Configuration options: [Enabled] [Disabled]

SATA Mode Selection

AHCI: Supports new features that improve performance.

Configuration option: [AHCI]

Hybrid Storage Detection and Configuration Mode

Hybrid Storage Detection and Configuration Mode allows you to select Hybrid Storage Detection and Configuration Mode.

Configuration options: [Dynamic Configuration for Hybrid Storage Enable] [Disabled]

SATA Aggressive Link Power Management

SATA Aggressive Link Power Management allows SATA devices to enter a low power state during periods of inactivity to save power. It is supported only by AHCI mode.

Configuration options: [Enabled] [Disabled]

Hard Disk S.M.A.R.T.

S.M.A.R.T stands for Self-Monitoring, Analysis, and Reporting Technology. It is a monitoring system for computer hard disk drives to detect and report on various indicators of reliability.

Configuration options: [Enabled] [Disabled]

3.3.4 Super IO Configuration



COM1 Configuration

Use this to set parameters of COM1.

Type Select

Use this to select COM1 port type: [RS232], [RS422] or [RS485].

COM2 Configuration

Use this to set parameters of COM2.

Type Select

Use this to select COM2 port type: [RS232], [RS422] or [RS485].

COM3 Configuration

Use this to set parameters of COM3.


COM4 Configuration

Use this to set parameters of COM4.

WDT Timeout Reset

Use this to set the Watch Dog Timer.

3.3.5 ACPI Configuration

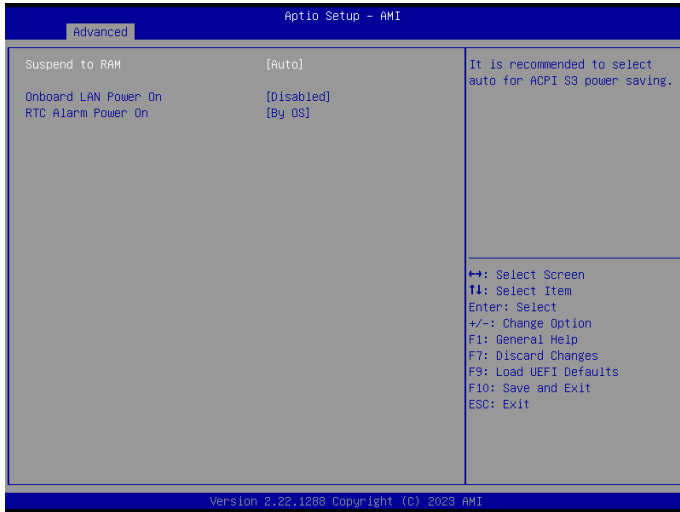

Suspend to RAM

Suspend to RAM allows you to select [Disabled] for ACPI suspend type S1. It is recommended to select [Auto] for ACPI S3 power saving.

Configuration options: [Auto] [Disabled]

Onboard LAN Power On


Use this item to enable or disable onboard LAN to turn on the system from the power-soft-off mode.

RTC Alarm Power On

RTC Alarm Power On allows the system to be waked up by the real time clock alarm. Set it to By OS to let it be handled by your operating system.

Configuration options: [Enabled] [Disabled] [By OS]

3.3.6 USB Configuration

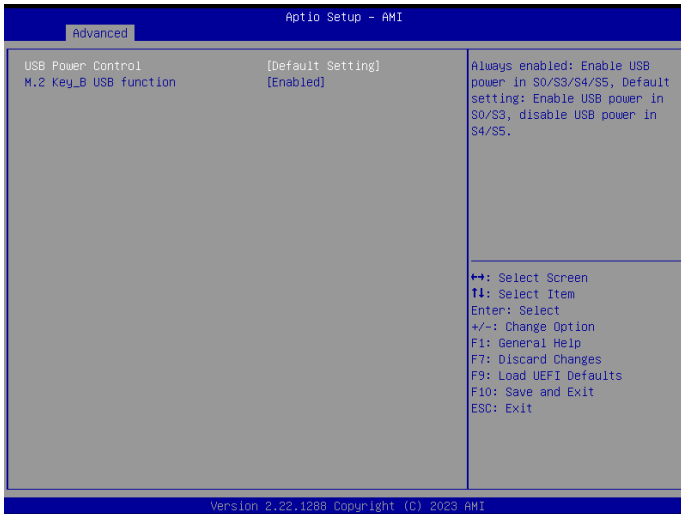

USB Power Control


Use this option to control USB power.

M.2 Key_B USB Function

Use this item to enable or disable M.2 Key_B USB Configuration.

Configuration options: [Enabled] [Disabled]

3.3.7 Trusted Computing

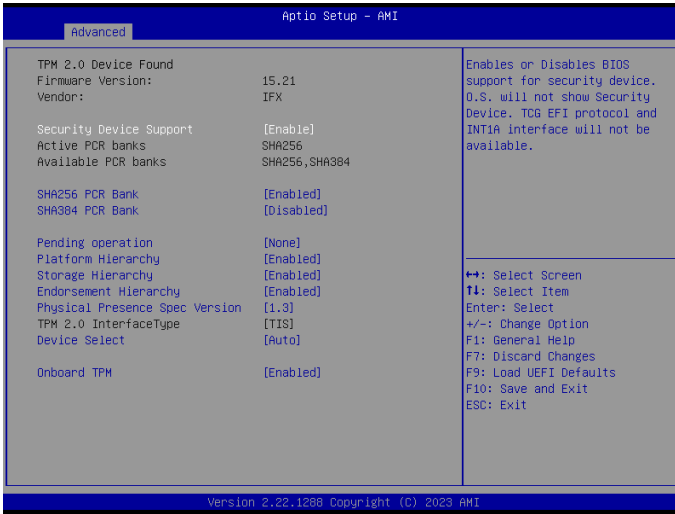

NOTE: Options vary depending on the version of your connected TPM module.

Security Device Support

Security Device Support allows you to enable or disable BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

Configuration options: [Enabled] [Disabled]

Active PCR banks

This item displays active PCR Banks.

Available PCR Banks

This item displays available PCR Banks.

SHA256 PCR Bank

SHA256 PCR Bank allows you to enable or disable SHA256 PCR Bank.

Configuration options: [Enabled] [Disabled]

SHA384 PCR Bank

SHA384 PCR Bank allows you to enable or disable SHA384 PCR Bank.

Configuration options: [Enabled] [Disabled]

Pending Operation

Pending Operation allows you to schedule an Operation for the Security Device.

NOTE: Your computer will reboot during restart in order to change State of the Device.

Configuration options: [None] [TPM Clear]

Platform Hierarchy

This item allows you to enable or disable Platform Hierarchy.

Configuration options: [Enabled] [Disabled]

Storage Hierarchy

This item allows you to enable or disable Storage Hierarchy.

Configuration options: [Enabled] [Disabled]

Endorsement Hierarchy

This item allows you to enable or disable Endorsement Hierarchy.

Configuration options: [Enabled] [Disabled]

Physical Presence Spec Version

Select this item to tell OS to support PPI spec version 1.2 or 1.3. Please note that some HCK tests might not support version 1.3.

Configuration options: [1.2] [1.3]

TPM 2.0 InterfaceType

This item allows you to view the Communication Interface to TPM 2.0 Device: CRB or ITS.

Device Select

This item allows you to select the TPM device to be supported.

[TPM 1.2] restricts support to TPM 1.2 devices.

[TPM 2.0] restricts support to TPM 2.0 devices.


[Auto] supports both TPM 1.2 and TPM 2.0 devices with the default set to TPM 2.0 devices. If TPM 2.0 devices are not found, TPM 1.2 devices will be enumerated.

Onboard TPM

Enable/disable Intel PTT in ME. Disable this option to use discrete TPM Module.

3.4 Hardware Health Event Monitoring Screen

This section allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, and the critical voltage.

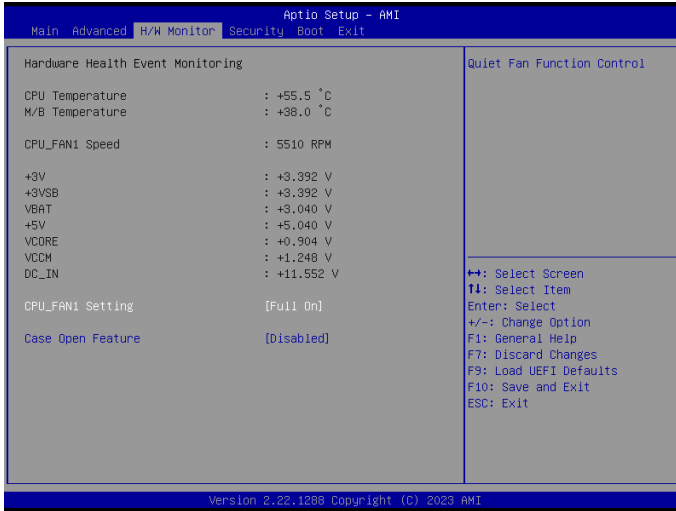

NOTE: Options vary depending on the features of your motherboard.

CPU_Fan 1 Setting

This item allows you to select a fan mode for CPU Fan 1. The default value is [Full On].

Configuration options: [Full On] [Automatic Mode]

Case Open Feature

This item allows you to enable or disable case open detection feature. The default is value [Disabled].

Clear Status

This option appears only when the case open has been detected. Use this option to keep or clear the record of previous chassis intrusion status.

3.5 Security Screen

In this section you may set or change the supervisor/user password for the system. You may also clear the user password.



Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

User Password

Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

Secure Boot

Press [Enter] to configure the Secure Boot Settings. The feature protects the system from unauthorized access and malwares during POST.



Secure Boot Mode

[Standard] Select this item and the system will automatically load the Secure Boot keys from the BIOS database.

[Custom] Select this item and Secure Boot Policy variables can be configured by a physically present user without full authentication.

Install Default Secure Boot Keys

Please install default secure boot keys if it's the first time you use secure boot.


Clear Secure Boot Keys

This item appears only when you load the default Secure Boot keys. Use this item to clear all default Secure Boot keys.

Key Management

This item enables expert users to modify Secure Boot Policy variables without full authentication.

This appears only when you set Secure Boot Mode to [Custom].

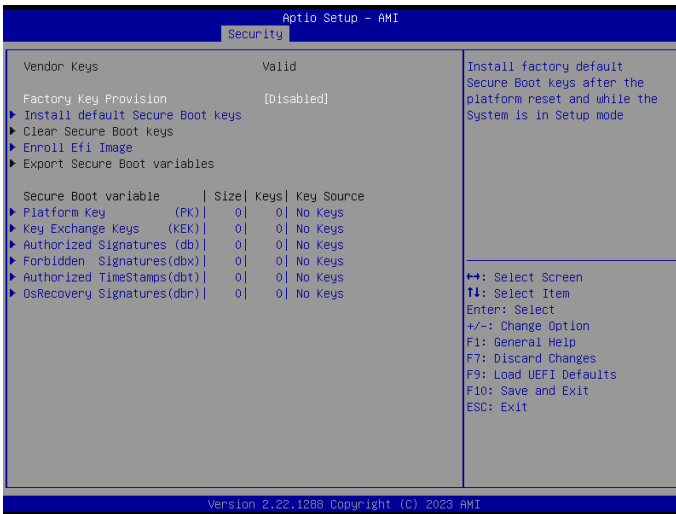

Platform Key(PK)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

Key Exchange Keys

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable
3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

Authorized Signatures

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate:
 - a) EFI_SIGNATURE_LIST
 - b) EFI_CERT_X509 (DER)
 - c) EFI_CERT_RSA2048 (bin)
 - d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable
3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

Forbidden Signatures

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate:
 - a) EFI_SIGNATURE_LIST
 - b) EFI_CERT_X509 (DER)
 - c) EFI_CERT_RSA2048 (bin)
 - d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable
3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

Authorized TimeStamps

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate:
 - a) EFI_SIGNATURE_LIST
 - b) EFI_CERT_X509 (DER)

c) EFI_CERT_RSA2048 (bin)

d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

OsRecovery Signatures

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate:

a) EFI_SIGNATURE_LIST

b) EFI_CERT_X509 (DER)

c) EFI_CERT_RSA2048 (bin)

d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

3.6 Boot Screen

This section displays the available devices on your system for you to configure the boot settings and the boot priority.



Boot Option #1

The item allows you to set the system boot order.

Boot From Onboard LAN

The item allows the system to be waked up by the onboard LAN.

Configuration options: [Enabled] [Disabled]

Setup Prompt Timeout

The item allows you to configure the number of seconds to wait for the UEFI setup utility.

Configuration options: [1] - [65535]

Bootup Num-Lock

The item allows you to select whether Num Lock should be turned on or off when the system boots up.


Configuration options: [On] [Off]

Full Screen Logo

[Enabled] Select this item to display the boot logo.

[Disabled] Select this item to show normal POST messages.

3.7 Exit Screen

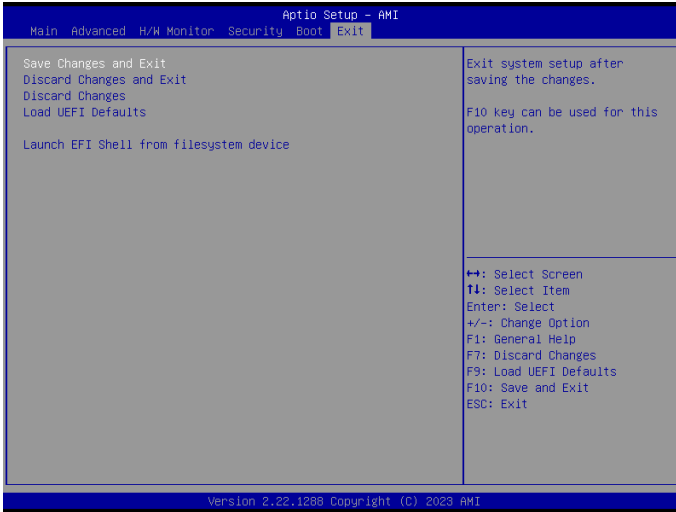

Save Changes and Exit

When you select this option, the following message “Save configuration changes and exit setup?” will pop out. Press <F10> key or select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

Discard Changes and Exit

When you select this option, the following message “Discard changes and exit setup?” will pop out. Press <ESC> key or select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.

Discard Changes

When you select this option, the following message “Discard changes?” will pop out. Press <F7> key or select [Yes] to discard all changes.

Load UEFI Defaults

Allows you to load UEFI default values for all options. The F9 key can be used for this operation.

Launch EFI Shell from filesystem device

The item allows you to copy shellx64.efi to the root directory to launch EFI Shell.